ARAT Telephone mount

Type: Chrysler
Voyager, model 1996 -2000

Part No: 1034.2

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

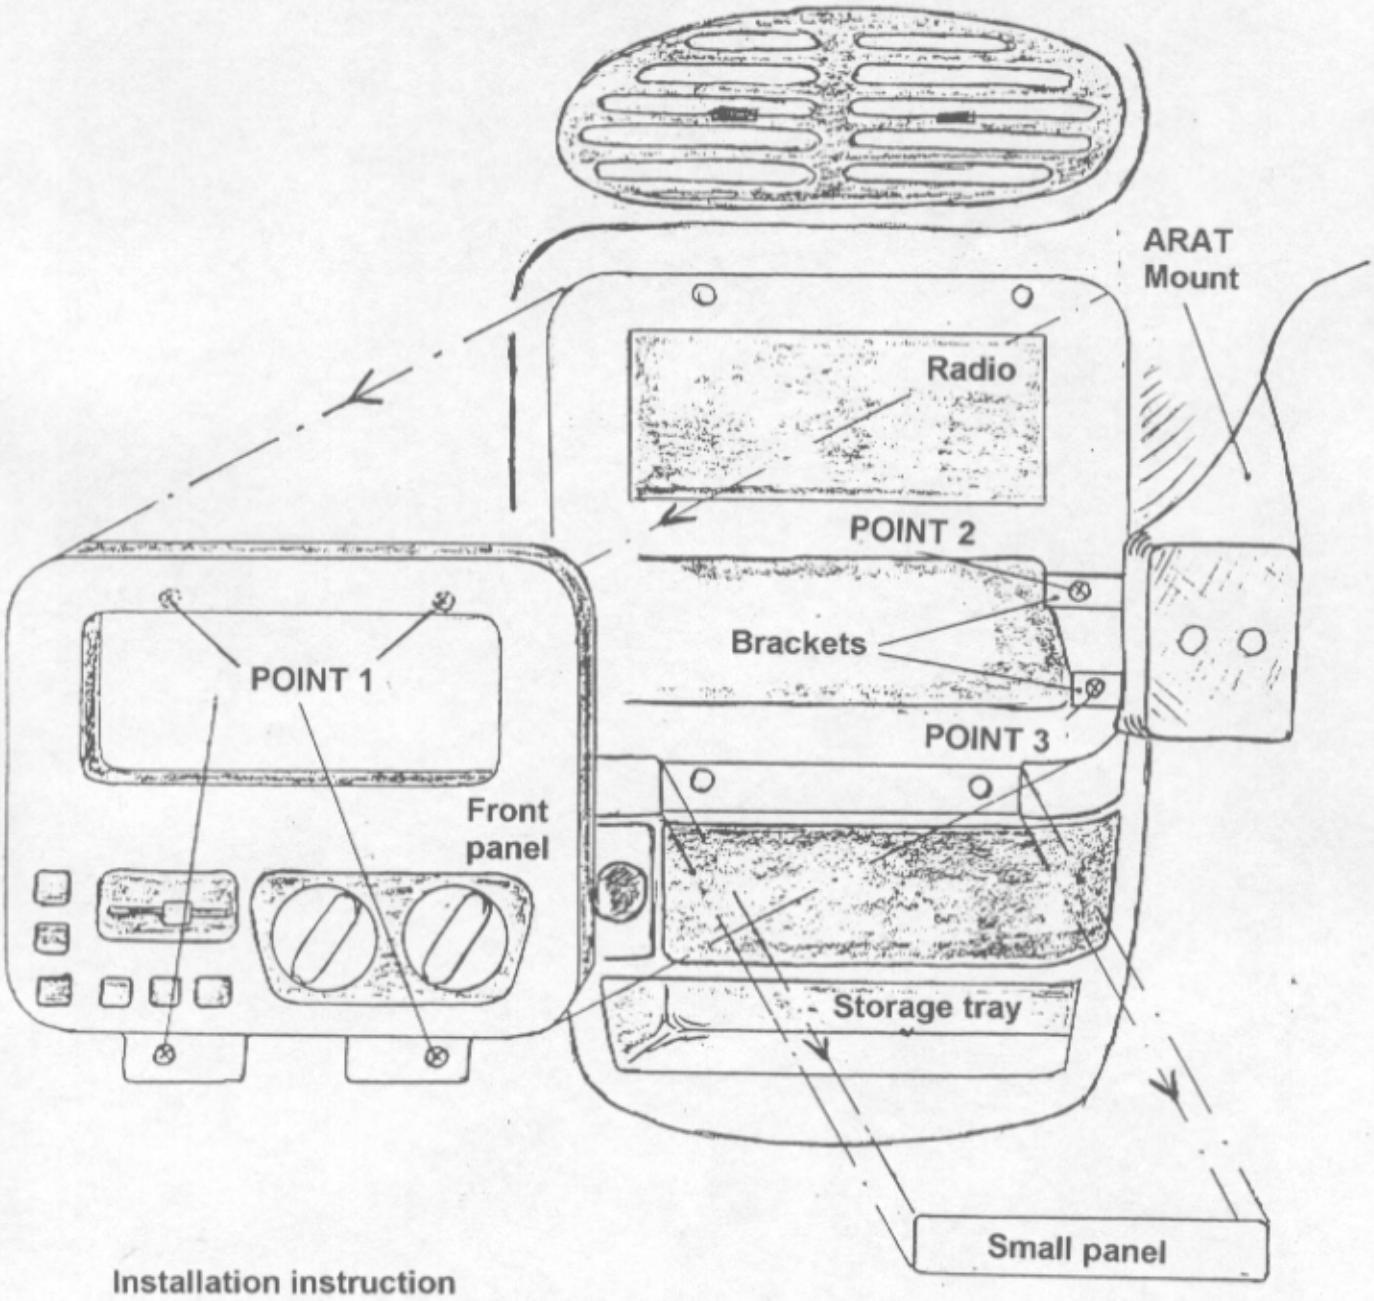

Installation instruction

1. Remove the small panel (it is only a clip fit)
2. Remove the screws at POINT 1 (4) and remove the front panel
3. Remove the screw at POINT 2, and place the ARAT mount to the contours of the dashboard and the screw at POINT 2 through the top bracket, the supplied screw at POINT 3, placing the spring washer behind through the bottom bracket (pre-drill the hole for the screw)
4. Replace the front panel , and the small panel